4 Completing Guided Setup

On your TV

- Use the remote to follow the onscreen instructions.
- Once setup is complete, select the channel you want to access.
- If the channel you select requires activation, follow the onscreen instructions.

Roku
welcome
Welcome to the Roku digital video player
Setup should take less than 3 minutes. During the process, you'll setup a connection between the player and your home network.
Press "select" on your remote to begin.
press "select" to begin

TIP:
Point your remote directly at your player.

DOC-001-04

5 Finding and Playing Videos

Finding videos

To go to the Home screen, press **Home**.

To select a channel, press **Left** or **Right** to highlight it, and then press **Select**. To select an item within a channel, press **Left** or **Right** to highlight it, and then press **Select**.

To return to the previous level, press **Up**.

To move through items a page at a time, press **Forward** scan or **Reverse** scan.

Playing videos

To start or resume playing, just press **Play**.

To stop a video, press **Up**.

To fast-forward, press **Forward scan** and to rewind, press **Reverse scan**. To scan faster, press the scan buttons again.

Press **Left** or **Right** to search one frame at a time.

TIP:
Depending on which channel and video you're watching, you may see a series of frames when scanning.

Getting Help

Online support

Check out these sites for web help:

- For questions on your channel account and finding videos, go to your channel's website.
- For questions on setting up your digital video player, go to **roku.com/support**.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

Pursuant to Part 15.21 of the FCC Rules, any changes or modifications to this equipment not expressly approved by the manufacturer may cause harmful interference and void your authority to operate this equipment. Use of supplied data cable is required to comply with the Class B limits of Part 15 of the FCC Rules.

Macrovision

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited. U.S. Patent Nos. 5,583,936; 6,836,549; 5,315,448; 6,381,747; 6,501,842; and 7,050,698.

Roku™

Getting Started

Your Roku Digital Video Player

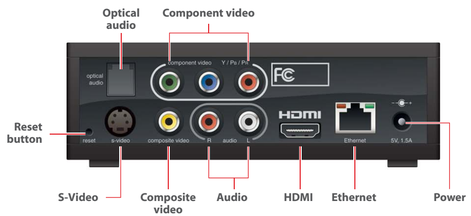

1 Inserting the Batteries in the Remote

Slide the top panel upward to open the remote.
Put two AAA batteries (included) in your remote.

2 Connecting Your Player to Your TV

Make sure your TV is on and is set to display the correct video input.

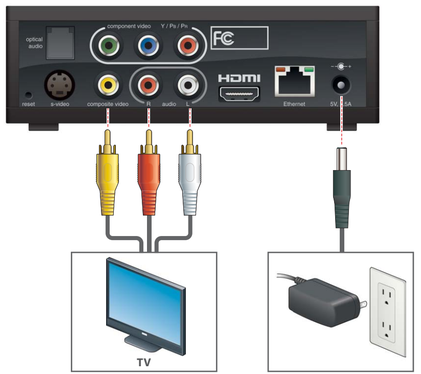

If your TV supports other audio/video inputs and you purchased the required cables, you can set up your player for better resolution. The following chart ranks the resolution for each setup option:

Video		Audio	
Composite	★	Stereo	★★★
S-Video	★★	Optical	★★★★
Component	★★★	HDMI	★★★★
HDMI	★★★★		

NOTES:
- If you use an HDMI video cable, you don't need a separate audio cable.
- Video/Audio quality may be compromised based on the speed of your broadband Internet connection.
- For additional information on alternate setups, see the *Roku Digital Video Player User Guide* at **roku.com/support**.

3 Connecting Your Player to Your Home Network

Your player supports both wireless and wired networks. Choose the setup that is best for your network.

Wireless: Place your player within range of your wireless network.

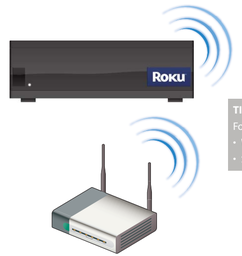

TIP:
For Wireless you need:
- Wireless Network name (SSID)
- Security Key or Passphrase

Or

Wired: Use an Ethernet cable (not included) to connect your player to your router.

Continued >

CMYK
4c/4c